 




Linux driver installation instructions



- 1、Put the the CD drive file into the desktop, spare.
- 2、Press “Ctrl+Alt+T”at same time,and open the command window as shown in the following pic:

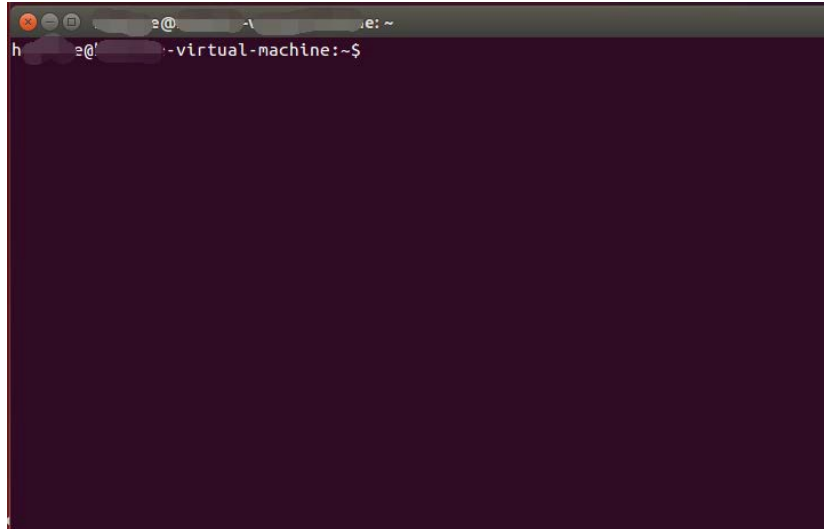

- 3、Execute the command as shown in the following pic:

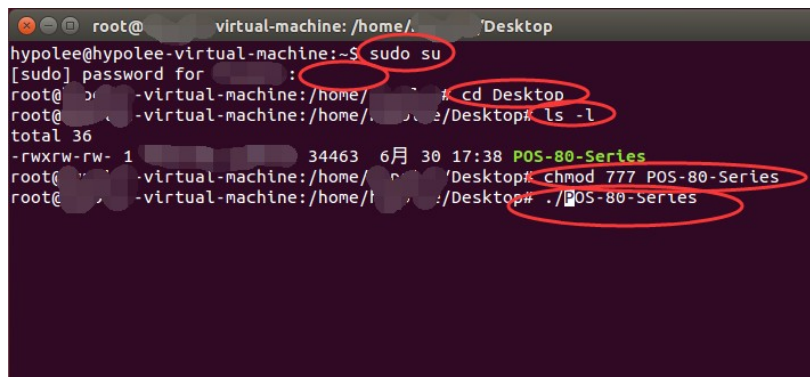

- 4、Press Enter till “./POS-80-Series”if you see the following pic that means the driver installation is completed

```
ServerBin tag not present in cupsd.conf - using default
DataDir tag not present in cupsd.conf - using default

ServerRoot =
ServerBin =
DataDir =


Copying rastertopos filter to /usr/lib/cups/filter
Copying model ppd files to /usr/share/cups/model/pos
Add POS-80-Series printer

Restarting CUPS
cups stop/waiting
cups start/running, process 3492

Install Complete
Go to http://localhost:631, or http://127.0.0.1:631 to manage your printer please!

root@hypolee-virtual-machine:/home/hypolee/Desktop#
```

5、Open Mozilla Firefox ① like pic below,input 127.0.0.1:631,click “Printers”Like pic below①

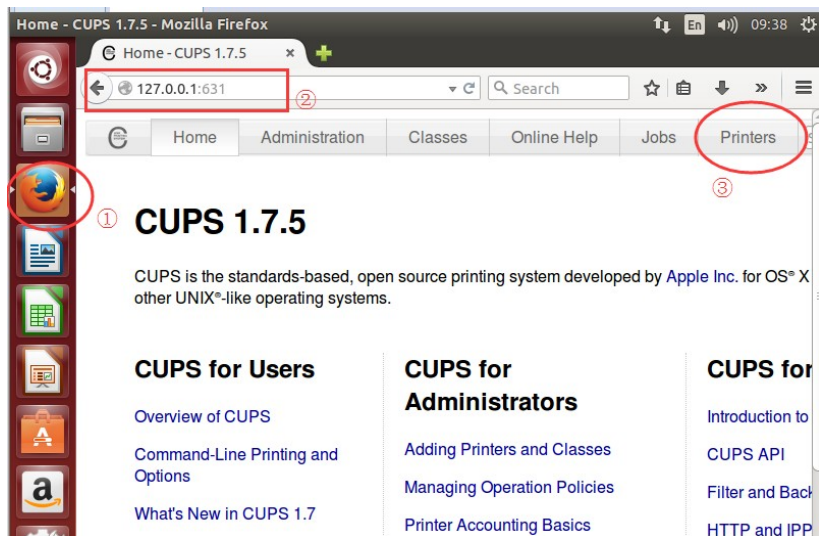

6、Choose the printers which installed just now like pic, below:



7、As shown in the pic below,you can set the printer. At this time if need to obtain the permission of settings, enter a user name and password then can go to the next step, here if the permission window still come, it is recommended

to restart the system and enter user name and password again.

POS-80-Series (Idle, Accepting Jobs, Not Share

Maintenance | Modify Printer

Description: POS-80-Series

Location: [Redacted]

Driver: POS-80 (grayscale, 2-sided printing)

Connection: socket://192.168.1.100:9100

Defaults: job-sheets=none, none media=om_x-80mm-y-210mm_80.08x

Jobs

Search in POS-80-Series:

POS-80-Series (Idle, Accepting Jobs, Not Shared)

Maintenance | Modify Printer

Description: POS-80-Series

Location: [Redacted]

Driver: POS-80 (grayscale, 2-sided printing)

Connection: socket://192.168.1.100:9100

Defaults: job-sheets=none, none media=om_x-80mm-y-210mm_80.08x

Jobs

Show Completed Jobs | Show All Jobs

No jobs.

Authentication Required


A username and password are being requested by http://127.0.0.1:631. The site says: "CUPS"

User Name: [Redacted]

Password: [Redacted]

Cancel OK

8、 The next step to choose the printer's print port, ① means noraml serail port
① means USB port ① means ethernet port,after selected click "continue "to
next step

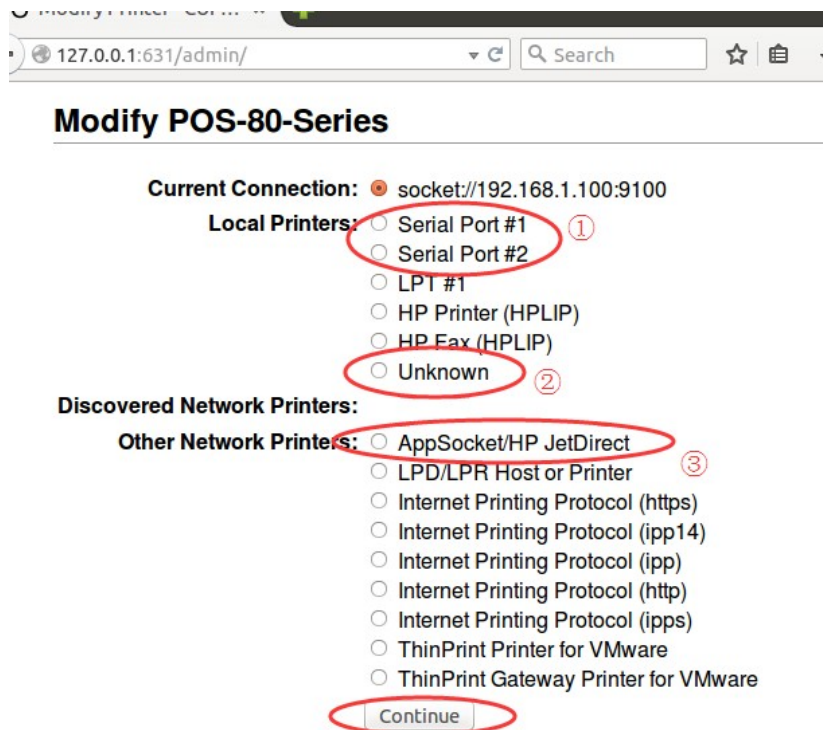

9、 Click“Continue”to next step as default settings

Modify POS-80-Series

Description:
(Human-readable description such as "HP LaserJet with Duplexer")

Location:
(Human-readable location such as "Lab 1")

Connection: usb://Unknown/Printer?serial=0001A0000000

Color Calibration Mode: Enabled

Sharing: Share This Printer

10、 Click“Modify Printer”as default settings to finish setting.

Modify POS-80-Series

Description: POS-80-Series
Location:
Color Calibration Mode: Not Enabled
Connection: usb://Unknown/Printer?serial=0001A0000000
Sharing: Share This Printer
Make:
Model:
Or Provide a PPD File: No file selected.

11. After waiting for the printer to enter the printer interface, you can choose to test the printer, pause, and cancel the task as shown in the following picture.

POS-80-Series (Idle, Accepting Jobs, Not Shared)

Administration
Maintenance
Print Test Page
Pause Printer
Reject Jobs
Move All Jobs
Cancel All Jobs
80-Series
80 (grayscale, 2-sided printing)
/Unknown/Printer?serial=0001A0000000
Defaults: job-sheets=none, none media=om_x-80mm-y-210mm_80.08x209.9mm sid

Jobs